

ON STEEP SLOPES, APPLY STRIPS OF NETTING PARALLEL TO THE DIRECTIONS OF FLOW AND ANCHOR AS PER MANUFACTURER'S SPECIFICATIONS (SLOPES GREATER THAN 1:1)


STEEP SLOPE

IN CHANNELS, APPLY NETTING PARALLEL TO THE DIRECTION OF FLOW.


SHALLOW SLOPE

LAY FROM BOTTOM UP W/4" LAP. KEY IN AT TOP OF SLOPE/BERM.


ON SHALLOW SLOPES, STRIPS OF NETTING MAY BE APPLIED ACROSS THE SLOPE. (SLOPES UP TO 1:1)

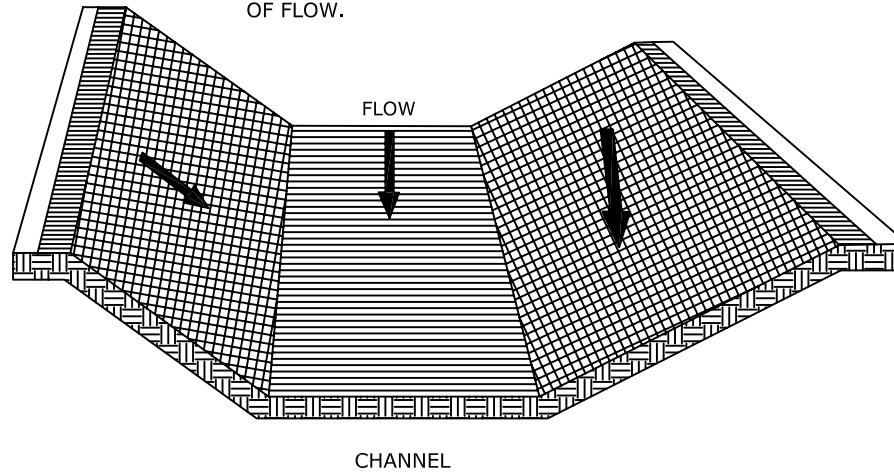

WHERE THERE IS A BERM AT THE TOP OF THE SLOPE, BRING THE NETTING OVER THE BERM AND ANCHOR IT BEHIND THE BERM.

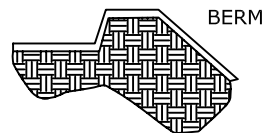

BRING NETTING DOWN TO LEVEL AREA BEFORE TERMINATING THE INSTALLATION.

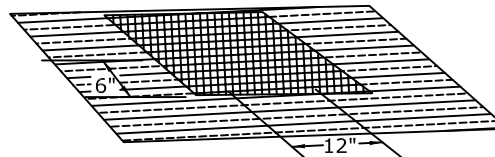

SOURCE: LOUISVILLE MSD



City of Bowling Green

Public Works Planning and Design
1011 College Street
Bowling Green, Kentucky 42101

**EROSION BLANKETS & MATS
ORIENTATION**

STANDARD DRAWING NO. **EPP-11-05**

APPROVED BY: _____ DATE _____
DIRECTOR OF ENGINEERING