


SHAPE AND SMOOTH SOIL SURFACE TO FINAL GRADE. WORK PRESCRIBED LIME AND FERTILIZER INTO THE SOIL.

LAY SOD IN A STAGGERED PATTERN. BUTT THE STRIPS TIGHTLY AGAINST EACH OTHER. DO NOT LEAVE SPACES AND DO NOT OVERLAP. A SHARPENED MASON'S TROWL IS A HANDY TOOL FOR TUCKING DOWN THE ENDS AND TRIMMING PIECES.

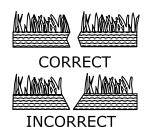

SOD CUTTER MUST BE MATCHED CORRECTLY.

BUTTING - ANGLED ENDS CAUSED BY THE AUTOMATIC

